Installation Instruction BAL-350

Proper installation of this unit is extremely important as it relates to the overall performance of the unit. In a typical installation of a storefront door and frame, it is important to ensure that the doorframe is square within the opening. However, with this type entrance, it is extremely important that the door be square with the doorframe. Making sure that the door is square with the doorframe will ensure that you have a door that opens & closes with ease. It will also ensure that the 4-point locking system performs adequately.

This unit is shipped with the door installed within the doorframe. This is done as an indication that the two must also be installed together. Below are the specific instructions for the glazing & installation of this unit:

DOOR GLAZING

THIS IS AN "IMPACT RESISTANT" DOOR & FRAME. THE MANUFACTURER SUGGESTS THAT THIS DOOR BE BENCH GLAZED PRIOR TO INSTALLATION.

- During the glazing process, the door must be laying flat on a bench
- Interior non-removable glass stops are factory installed
- Clean the glass area with alcohol or an approved cleaner using the *"2wipe method"
- Insert the interior silicone backer/gasket (horizontal backer should be cut to run thru)
- Secure the interior silicone backer/gasket using a block of wood or a mallet
- Apply silicone (Dow 995) in the area between the gasket and the interior glass stops, approximately 1/8" above the level of the interior silicone backer/gasket
- Prior to installation of the glass, clean the glass edge using the *"2-wipe method"
- Carefully install the glass
- Apply the exterior glass stops
- Securely install the exterior wedge gasket using a roller or a mallet
- Flip the door and clean off excess silicone from the interior edge of the glass using a putty knife

^{* &}quot;2-wipe method" – use two clean, lint free rags. Apply alcohol or approved cleaner to one rag. Wipe area where silicone is to be applied thoroughly, removing all oils and dust or dirt. Using the second dry rag, wipe the same area thoroughly.

DOOR & FRAME INSTALLATION

THIS IS AN "IMPACT RESISTANT" DOOR & FRAME. BECAUSE OF THE THICKNESS OF BOTH THE ALUMINUM AND THE GLASS, IT IS ADVISABLE THAT AT LEAST TWO INDIVIDUALS ARE INVOLVED IN MOVING AND INSTALLING THIS DOOR.

- Set door & frame in center of opening (threshold should be set in a bed of sealant)
- Remove the screws (#10-24 X ½") at the header
- Remove door stop at the header
- Install first anchor below the hinge (install shims prior to tightening)
- Tighten completely
- Install second anchor at top (install shims prior to tightening)
- Tighten completely
- With a 6' level, check level and plum of entrance
- Position frame on lock side to match location of frame on hinge side.
- Install anchor at bottom (install shims prior to tightening)
- Tighten completely
- Close door & adjust frame to make sure the doorframe is square with the door.
- Test the locking hardware while the door is closed. If the door does not operate properly, adjustment of the doorframe is necessary.
- Once the door is square with doorframe, install an anchor near top
- Re-check unit for squareness between door & doorframe
- Adjust as necessary
- Install balance of anchors
- Trim the bulb gasket on the vertical stops (vertical bulb gaskets must mate with horizontal bulb gaskets)
- Install vertical Door Stops using a wood or rubber mallet
- Apply sealant at junction of vertical and horizontal bulb gasket

<u>INSTALLATION INSTRUCTIONS FOR THE DOOR CLOSER ARE</u> PROVIDED WITHIN THE CLOSER BOX.