



3C. Astragal is now ready for installation. Check for smooth operation.

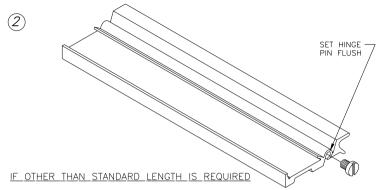

- 2A. Determine length as shown in view (1)
- 2B. Remove #6 x 1/4 pan Hd. self tapping screw at bottom of astragal.
- 2C. RAP BOTTOM OF ASTRAGAL ON FLOOR TO SET HINGE PIN FLUSH WITH ASTRAGAL. IMPORTANT: DO NOT ALLOW HINGE PIN TO EXTEND OUT FROM ASTRAGAL.
- 2D. Cut astragal as required.

INSTALLATION INSTRUCTIONS FOR STATIONARY LEAF SCREW COVER

- 1. CHECK ALIGNMENT AND FUNCTION OF ASTRAGAL ON DOOR SINCE ADJUSTMENTS CANNOT BE MADE AFTER LEAF SCREW COVER IS INSTALLED.
- 2. LINE UP STATIONARY LEAF AND LEAF SCREW COVER AT THE BOTTOM.
- 3. INSTALL LEAF SCREW COVER AS SHOWN.

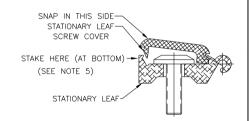

- 4. SNAP IN LEAF SCREW COVER. THIS MAY BE DONE BY USING A MALLET AND A WOOD BLOCK AND TAPPING EDGE EVERY THREE (3) INCHES. ALONG THE LENGTH OF THE ASTRAGAL.
- 5. AFTER LEAF SCREW COVER IS INSTALLED, STAKE STATIONARY LEAF AT BOTTOM.
- 6. TO REMOVE LEAF SCREW COVER: INSERT A TACK PULLER OR SCREW DRIVER BLADE AT EITHER TOP OR BOTTOM OF THE LEAF SCREW COVER AND CAREFULLY PRY UP EDGE-SNAP SIDE.
- 7. SLIDE TOOL ALONG EDGE OF ASTRAGAL UNTIL LEAF SCREW COVER SNAPS FREE. IF DONE CAREFULLY, THE LEAF SCREW COVER MAY RE-USED.

| | B 3/5/98 R E D R A | WN | | | EC | N1143 | RM | |
|--------------------------|---------------------------------|----------|-------------|---------|-----|---|---------------|--|
| | DIMENSIONAL TOLERANCES | | APPROVALS [| | | _ | $\overline{}$ | |
| | UNLESS OTHERWISE SPECIFIED | APPROVED | | | | • • • | | |
| | DECIMAL DIMENSIONS .XX ± .010 | CHECKED | | | | iackso | | |
| | DECIMAL DIMENSIONS .XXX ± .005 | CHECKED | | | | | | |
| | ANGULAR ± . O FRACTIONAL ± 1/64 | DRAWN | JJM | 6/19/97 | | <u>CORPORAT</u> | | |
| FILE NO. | MATERIAL | SCALE | NOI | NE | | 3447 UNION PACIFIC LOS ANGELES, CALIF. | | |
| NEXT ASSY. 9613-X-XXX | FINISH | 9613 | | | 3 | SHEET 2 OF 2 SHEETS DWG. NO. REV. | | |
| QTY. USED 1 | HEAT TREAT | | AS | STRAC | GAL | 15-577 | ΙвΙ | |