

## MOUNTING INSTRUCTIONS

1. DETERMINE HAND OF DOOR AND ESTABLISH CENTER LINE OF

2. PREPARE STILES PER TEMPLATES: 10-484 TEMPLATE FOR ACTIVE STILE. 10-475 TEMPLATE FOR INACTIVE STILE.

- 3. DRILL CYLINDER MOUNTING HOLES ONLY IF REQUIRED
- 4. LOCATE CENTER LINE OF CYLINDER ON EXTERIOR SIDE OF ACTIVE STILE AND DRILL IF REQUIRED.
- 5. TRIM TAIL PIECE TO FIT AS SHOWN.
- 6. MOUNT CYLINDER IN PLACE AND SECURE WITH MOUNTING SCREWS. (SCREWS MUST BE FLUSH WITH DOOR.)
- 7. DETERMINE FUNCTION DESIRED:
  - A.) REGULAR FUNCTION KEY REMOVABLE IN EITHER LOCKED OR UNLOCKED POSITION. FULLY RELEASE LATCH THEN SET INDEX MARK ON COUPLING BOSS STRAIGHT UP.
  - B.) NIGHT LATCH FUNCTION: KEY REMOVABLE IN LOCKED POSITION ONLY. PREFORM STEP 'A' THEN ROTATE' COUPLING BOSS 90° TOWARDS HINGE SIDE.
- 8. DRILL .203 (5.16)DIA. AND TAP 1/4-20(M6-1.0) THD (4 PLCS.) ON ACTIVE AND INACTIVE STILES.


& INSTALL FOUR (4) 1/4-20 SHOULDER STUDS. MOUNT ACTIVE PAD TO STILE WITH THREE 1/4-20(M6-1.0) x 1/2(12.7) SOC. SET SCREWS.

- 9. LOCATE AND DRILL MOUNTING HOLES FOR ADJUSTABLE STRIKE. ( CENTER ON LATCH)
- 10. MOUNT AND SECURE STRIKE AS SHOWN.
- 11. CHECK OPERATION TO ASSURE THAT ALL PARTS AND CYLINDER ARE FUNCTIONING PROPERLY. ADJUST AS REQUIRED.
- 12. MOUNT INACTIVE PAD TO STILE WITH THREE (3)  $1/4-20(M6-1.0) \times 1/2$  ( 12.7)
- 13. CUT LENGTH OF PANIC BAR BY MEASURING FROM INSIDE TO INSIDE EDGE OF MOUNTING PADS. 1/32 (.79) FIT TO SIZE.
- 14. LOOSEN INACTIVE PAD. INSTALL AND SECURE PANIC BAR WITH TWO 1/4-20(M6-1.0) x1(25.4) OVAL HD.M.S. (PHIL.) RETIGHTEN PAD SET SCREWS.

DOGGING INSTRUCTIONS:

TO DOG- DEPRESS CROSS BAR TURN KEY TOWARD LOCK SIDE OR PUSH DOGGING TO UNDOG- DEPRESS CROSS BAR TURN KEY TOWARD LOCK SIDE OR ROTATE DOGGING PIN UNTIL IT RELEASES.

		F 6.27.03 INCORPORATE SINTERED ROLLER-LESS "C" STRIKE					ECN1625	RM
	E 5/16/89 5/8 WAS 19/32							RM
	DIMENSIONAL TOLERANCES		APPROVALS		DATE			
		UNLESS OTHERWISE SPECIFIED	APPROVED				• • •	<b>-</b>
		DECIMAL DIMENSIONS .XX ± .010	CHECKED				iackso	
		DECIMAL DIMENSIONS .XXX ± .005						
		ANGULAR ± X O FRACTIONAL ± 1/64	DRAWN	RM	6/28/97		CORPORA	1 0 N
	FILE NO.	MATERIAL	SCALE	cale NONE			3447 UNION PACIFIC LOS ANGELES, CALIF.	AVE. 90023
	NEXT ASSY. 1095-KITS	FINISH	INSTLLATION GUIDE 1095 RIM PANIC DEVICE FOR CENTER HUNG NARROW STILE 10-				SHEET 1 OF 1 SH DWG. NO.	REV.
	QTY. USED 1	HEAT TREAT					10-480	F

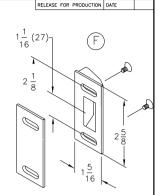

STRIKE